

PATTERN PLAY

Tone-on-Tone Stenciling

Using a downloadable stencil and two soft shades (or two sheens of the same color for a subtle statement), create a visually rich pattern in place of a single-color accent wall.

You'll Need:

Dutch Boy® Platinum® Plus paint (2 colors)	Painter's tape
Angled paintbrush	Tape measure
Woven roller cover and roller frame	Level
Mini foam roller cover and roller frame	Pencil
Paint tray and liners	Drop cloth
Stencil design and instructions (see pages 2 – 3)	Clean, damp cloth

Here's How:

-
- Step 1** Wipe wall with the clean, damp cloth to prepare painting surface.
- Step 2** Lay down the drop cloth to protect floors; use painter's tape to cover trim, molding, ceiling and any adjacent walls.
- Step 3** Using the angled brush, apply base color just inside taped areas, then paint remaining area with the woven roller; remove painter's tape while paint is still damp; allow paint to dry 24 hours.
- Step 4** Find the center of the wall and lightly mark with the pencil; center the stencil over the pencil mark; use the level to ensure that the stencil is straight; secure the stencil in place with the painter's tape.
- Step 5** Using the mini foam roller, apply the second color over stencil; carefully lift the stencil after paint application; wipe down stencil after each use.
- Tip: To save on cleanup time, create multiple stencils.*
- Step 6** Line up stencil with previously painted design; repeat until you reach adjacent walls, ceiling and baseboard.
- Step 7** Allow paint to dry, following suggested drying time on the can label.

Find more paint projects at menards.dutchboy.com/projects.

See paint can labels for application instructions and drying times.

Use Dutch Boy® paint to ensure precise color match. Refer to the actual color chip for accurate color representation.



Stencil: Coastal Mist 427-1DB
Stencil Basecoat: Cooled Breeze 136-1DB
Trim: Pebble Shores 408-1DB

STENCIL INSTRUCTIONS

As seen in the project "Pattern Play"

You'll Need:

Downloadable geometric design

X-Acto® knife

Stencil film (or clear, thin acetate)

Self-healing cutting mat or

Fine-tipped marker

hard work surface

Here's How:

Step 1 Download and print the geometric design.

Step 2 Place the design under the stencil film.

Step 3 Use the marker to trace the design onto the stencil film.


Step 4 Place the stencil film on a self-healing mat or hard work surface.

Step 5 Use the X-Acto® knife to cut out the design.



STENCIL DESIGN

As seen in the project "Pattern Play"

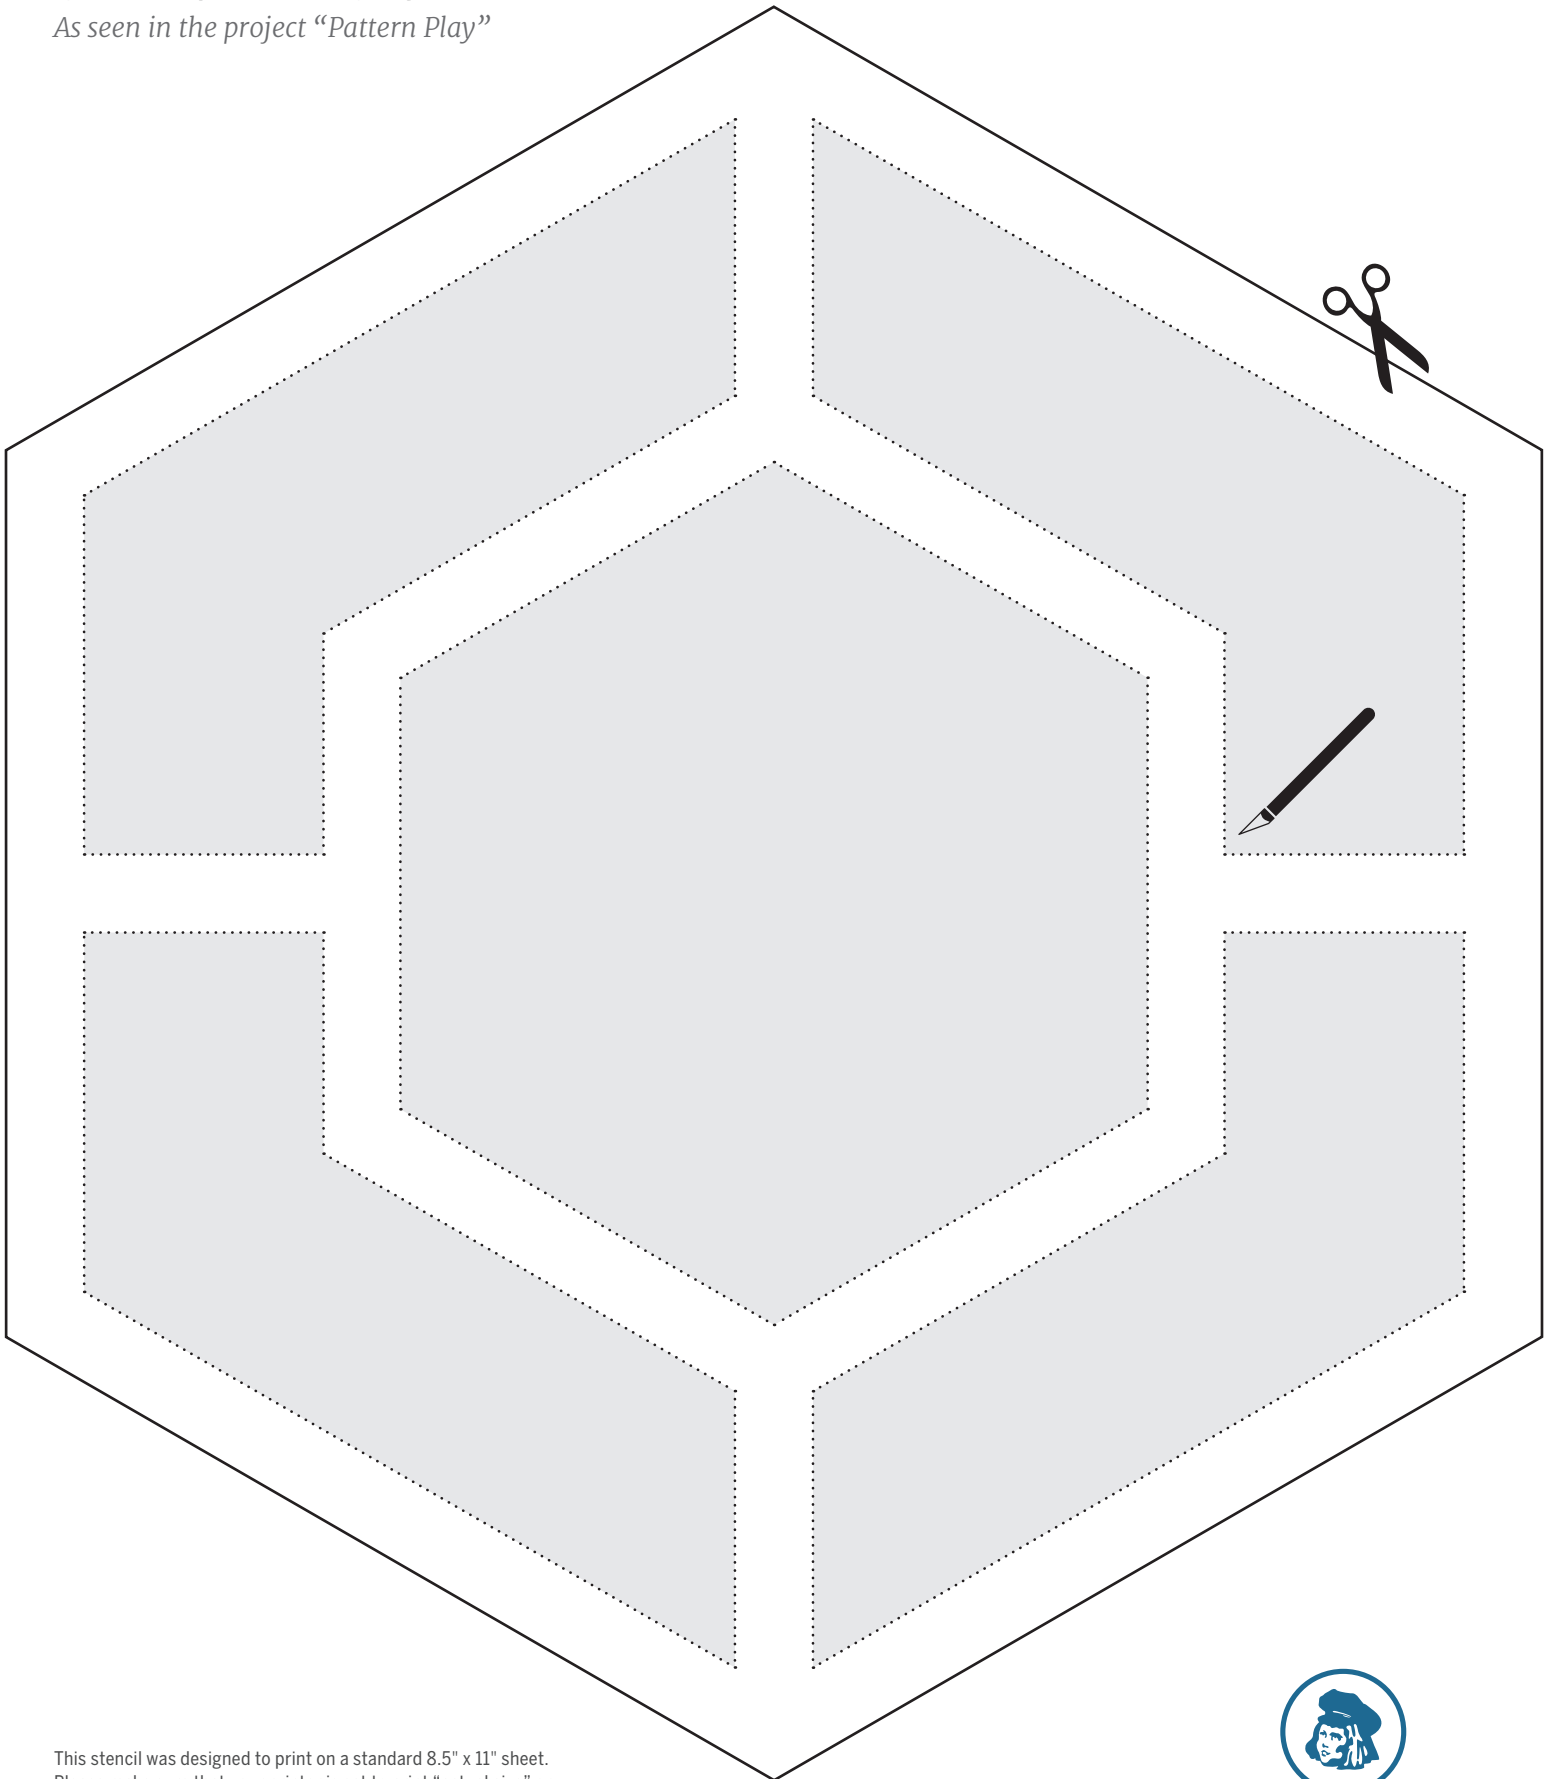

This stencil was designed to print on a standard 8.5" x 11" sheet. Please make sure that your printer is set to print "actual size" or 100% and is not set to "fit to page" or reduced in size.

For more information, call 1.800.828.5669 or visit dutchboy.com.
© 2015 Dutch Boy Group, Cleveland, Ohio



Dutch Boy