

# RAISE EXPECTATIONS

## Painted Ceiling

Set the style bar high with subtle yet gorgeous wall-to-ceiling color.

### You'll Need:

---

Dutch Boy® Ceiling Paint	Roller extension pole
Dutch Boy® Platinum® Plus paint (in same color as Ceiling Paint)	Paint tray and liners
Angled paintbrush	Painter's tape
Woven roller covers and roller frame	Drop cloth
	Clean, damp cloth

### Here's How:


---

- Step 1** Wipe ceiling with clean, damp cloth to prepare painting surface.
- Step 2** Lay down the drop cloth to protect floors and any furniture; use painter's tape along the top edge of all adjacent walls.
- Step 3** Use the angled brush to apply ceiling paint around the ceiling perimeter, then use woven roller and extension pole to paint remainder of ceiling.
- Step 4** Remove painter's tape while paint is still damp; clean up any mistakes with clean, damp cloth and allow paint to dry 24 hours.
- Step 5** Wipe walls with clean, damp cloth to prepare painting surface; apply painter's tape to baseboards, ceiling and any molding or trim.
- Step 6** Using the angled brush, apply Platinum® Plus paint just inside taped areas and then paint remaining area with the woven roller.
- Step 7** Remove painter's tape while paint is still damp; allow paint to dry, following suggested drying time on paint can label.

Find more paint projects at [menards.dutchboy.com/projects](http://menards.dutchboy.com/projects).

See paint can labels for application instructions and drying times.

Use Dutch Boy® paint to ensure precise color match. Refer to the actual color chip for accurate color representation.

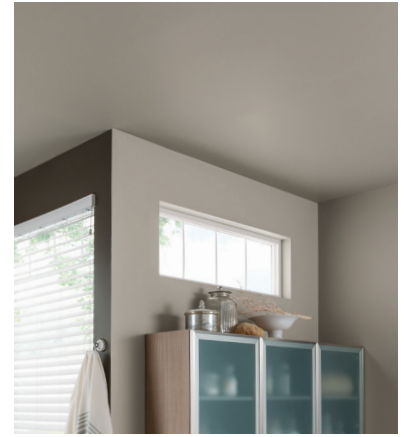

Right Wall and Ceiling: **Dusky Gray 439-3DB**  
Left Wall: **Charcoal Brick 405-7DB**